


Wireless and Safety Edge Reset and Immediate Set

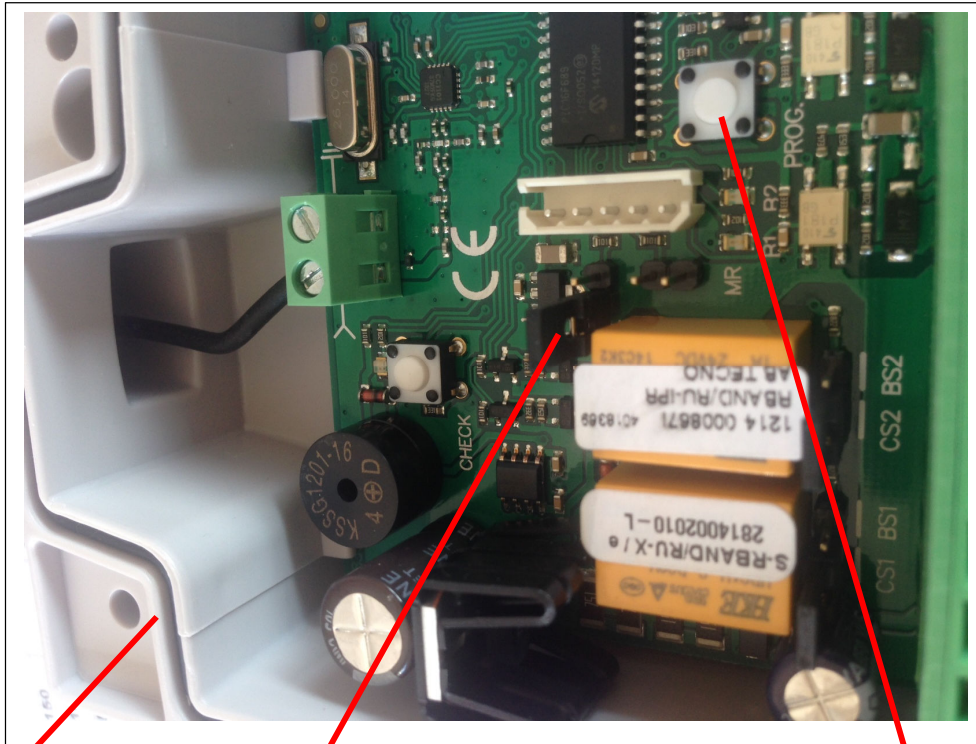

Receiver

Jumper

Push button "PROG"

In order to reset and set immediately after the unit transmitter – receiver of the wireless safety edge, follow these steps.

1. Remove in the receiver the jumper just laid on plugs "Polarity" (It is not connected, it is just laid !).
2. Plug the jumper on "MR" plugs.
3. Push the push button "PROGR" on the receiver.
4. Keep the push button "PROGR" in the receiver pushed listening some beeps.
5. There will be some spaced beeps and then some rapid beeps.
6. When beeps stop remove immediately the jumper.
7. Push the push button "PROGR" in the transmitter. Just once. Don't keep the button pushed
8. Between the beeps stop and the push button "PROGR" in the transmitter be pushed the maximum delay is 5 s (Be careful : NO MORE THAN 5 SECONDS !).
9. When the push button "PROGR" in the transmitter is pushed (Point 7) one beep in the receiver sounds. Just only one.
10. After 8 to 10 s two beeps in the receiver sound. The procedure is now finished.
11. After this procedure only one of the two LED on the receiver will be lighted ON.